

# Trim Tab Installation Instructions

## Part #LT-500

### PARTS INCLUDED IN THIS KIT

TRIM TABS  
HYDRAULIC PUMP  
PLASTIC HYDRAULIC LINES WITH FITTINGS  
STANDARD DASH SWITCH  
COMPLETE WIRING HARNESS

#### NOTE:


USE SILICONE SEALER, ON ALL TRIM LINES THROUGH TRANSOM FITTINGS, AND BOLTS.

AFTER ALL HYDRAULIC LINES ARE INSTALLED AND TIGHTENED, FILL TRIM MASTER PUMP TO THE MAX WITH TRIM-HYDRAULIC HYDRAULIC FLUID.

CYCLE TABS "UP AND DOWN" SEVERAL TIMES WHILE CHECKING FOR LEAKS (PUMP IS SELF-BLEEDING). REFILL HYDRAULIC TANK TO MAX.


#### NOTE:

MOUNTING POSITION WITH HYDRAULIC CYLINDER IN FULL UP POSITION (AS SHOWN)

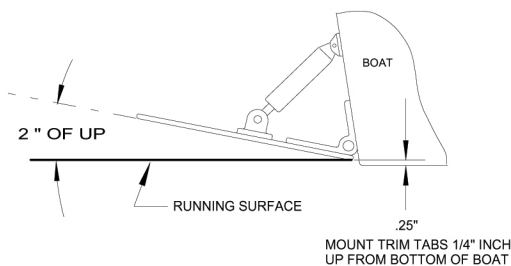


#### NOTE:


TYPE CONNECTING OF HYDRAULIC LINES DO NOT OVER TIGHTEN

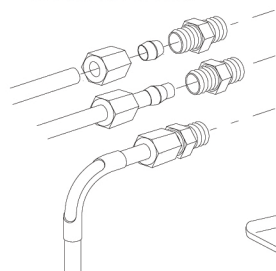

### STEP 3

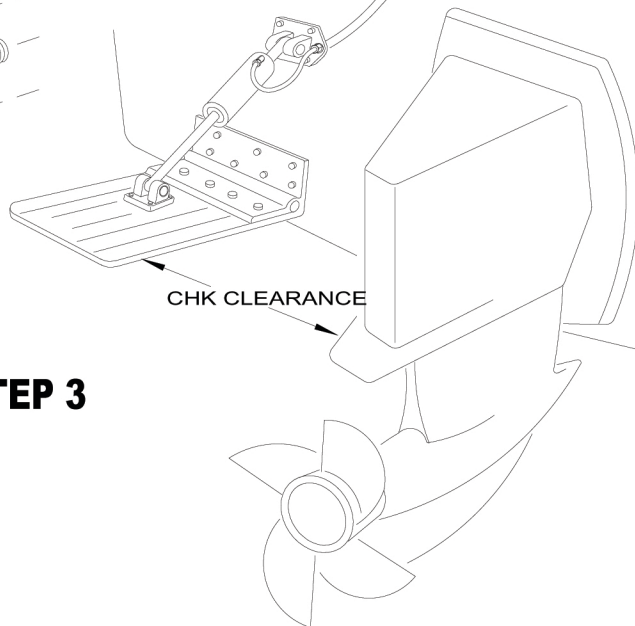

### STEP 1

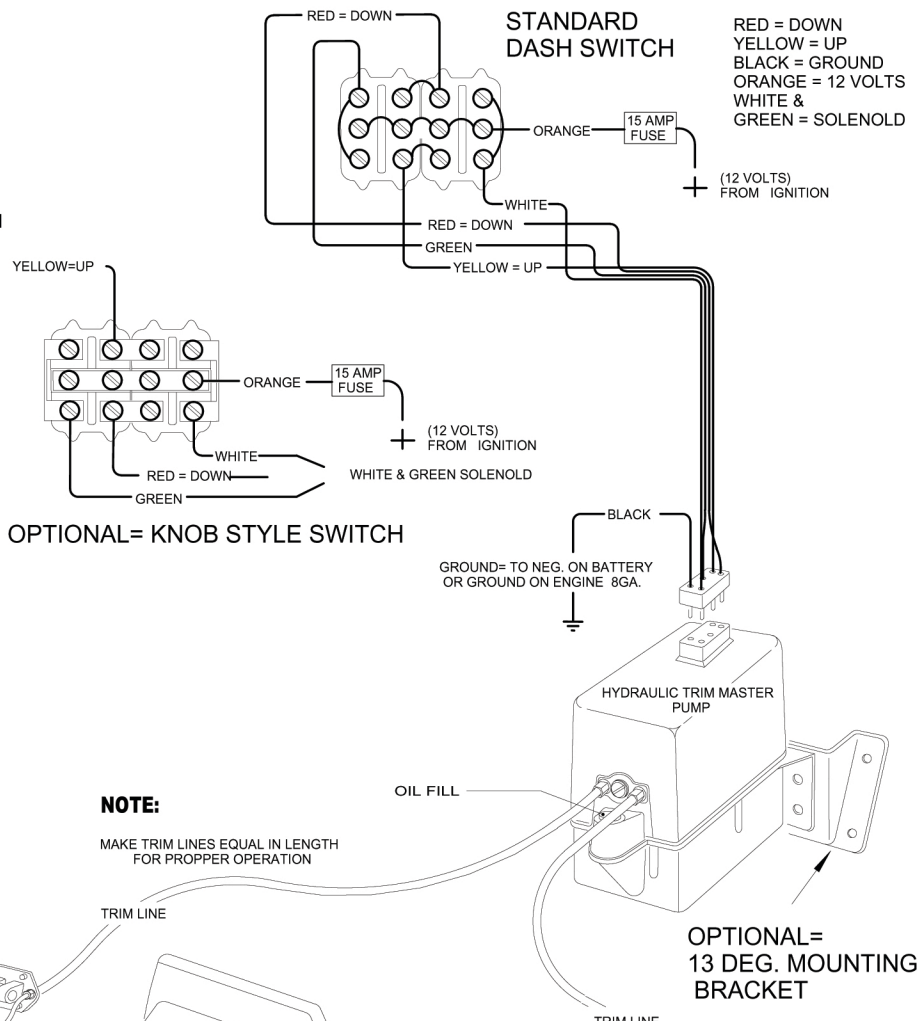

#### NOTE:

MAKE TRIM LINES EQUAL IN LENGTH FOR PROPER OPERATION

OPTIONAL= 13 DEG. MOUNTING BRACKET

### STEP 2

